

# MITEL 5330e IP PHONE



- |                                 |                     |
|---------------------------------|---------------------|
| 1 Display                       | Speaker             |
| 2 Ring/Message Indicator        | Mute                |
| 3 Volume, Speaker/Mute Controls | Menu                |
| 4 Fixed Function Keys           | Cancel              |
| 5 Keypad                        | Redial              |
| 6 Page Navigation Keys          | Hold                |
| 7 Personal Keys                 | Transfer/Conference |
| 8 Speaker                       | Message             |
| 9 Handset                       |                     |

<sup>1</sup> Brightness Control is available on backlit display models only.

**NOTE:** For more information about other features and applications on your 5330e IP Phone, refer to *5330e/5340e IP Phone User Guide* located at [www.mitel.com](http://www.mitel.com), or contact your Administrator.

## Make a Call

- 9 Lift the handset OR
- 3 Press .
- 5 Dial the number OR
- 7 Press a **Speed Call** key OR
- 4 Press OR
- 5 Dial the prefix for external calls (e.g. 9) and the number.

## Answer a Call

- 9 Lift the handset OR
- 3 Press , and begin speaking.

## End a Call

- 4 Press OR
- 9 Replace the handset.

## Place a Call on Hold

- 4 Press . The line key flashes.
- 9 Replace the handset if necessary.

## Retrieve a Call from Hold

- 9 Lift the handset OR
- 3 Press .
- 7 Press the flashing line key.

## Retrieve a Message

- 4 Press . It flashes when a message is waiting.
- Follow the voice mail prompts to retrieve your message.

## Transfer a Call

- 4 Press .
- Dial the number. Wait for an answer.
- Hang up OR announce the transfer and then hang up.

## Conference a Call

- 4 Press .
- 5 Dial the number. Wait for an answer.
- 4 Press .

## Program a Speed Call

- 4 Press **Menu** OR .
- Press **Settings**.
- Press **Programmable Keys**.
- Press the key you wish to program.
- Press **Speed Call**.
- Press **Edit Info** and enter the label for the Speed Call.
- Press **Save**.
- Press **Edit Number** and enter the phone number for the Speed Call.
- Press **Save**, and then press **Save** again.
- Press **Close** and then press **Close** again.

## Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

- 3 Press repeatedly to raise the volume OR repeatedly to lower the volume.
- 3 Press to mute your microphone.